

ATLAS FENCE INSTALLATION

SUPPORT NOTES TO METROLL FENCING INSTALLATION GUIDE

The ATLAS fence profile from Metroll has variations to other Metroll fence profiles. This brochure covers important installation notes for ATLAS fencing and should be read in conjunction with the **Metroll Fencing Installation Guide** available in the **Resources** section on the website.

1. POST INSTALLATION FOR ATLAS PROFILE

When fixing Metroll fence posts back to back, install fasteners wide apart against the lip of the post to allow for the best fit of the ATLAS sheets.

Do not position fasteners in the centre of the posts as this will prevent the ATLAS sheet fitting closely against the post.

2. SHEET PROTECTIVE FILM

A removeable protective COLORBOND® film is applied to 1 side of the ATLAS sheet. This film protects sheeting during manufacture, transportation and handling. Remove this film by peeling it off in one piece before installing the sheet.

3. ATLAS SHEET FITTING


RAIL INSTALLATION FOR ATLAS PROFILE

ATLAS sheets fit tightly into the rail. Take care not to scratch the rail when installing sheets.

OVERLAPS

Care must be taken when installing ATLAS sheets as the fit is not universal. ATLAS sheeting has been designed to nest into each other. The rib at one end is wider than the rib at the other end so sheets can overlap easily and cleanly.

- Install the wider end rib over the top of the narrow end rib.
- Do not force two of the same ends together. ATLAS sheets will nest tightly without force required.
- If sheeting does not nest easily, check the correct ends have been positioned for overlap.

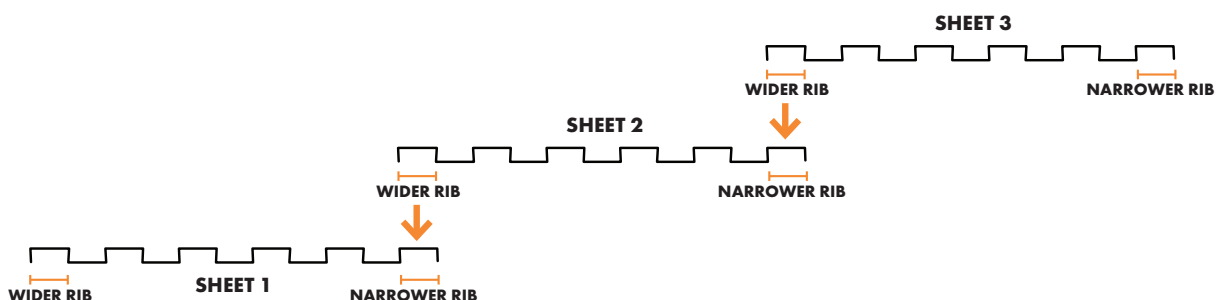

EXCERPT FROM METROLL FENCING INSTALLATION GUIDE

STEP 2. ASSEMBLE POSTS

IMPORTANT!

Assemble posts by screwing them back to back with 7 staggered screws.

HINT: Position the top screw below your top rail to avoid catching when positioning the top rail in place.

